


User manual



CONTROL BUTTONS

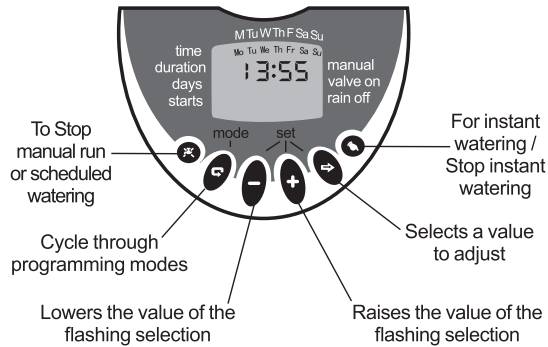

Maximum operating pressure: 80PSI For irrigation use only


INSTALLING THE BATTERY

9V ALKALINE BATTERIES ARE RECOMMENDED

Remove the battery cover – keep battery compartment dry – install the 9V Battery by lining up the connections.

Place the battery inside the compartment and reinstall the battery cover.

NOTE: When battery is first connected, it takes up to 1 minute for the battery indicator to assess the battery strength.

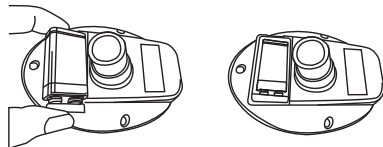

MAINTENANCE

Remove and clean the screen washer on inlet side of the timer every few months.

Remove battery if timer is not used for an extended time.

In freezing conditions, un-install the timer and bring it indoors to prevent damage.

HOW TO INSTALL


Attach the timer inlet to the outdoor faucet/spigot turning clockwise – hand tighten only. From the timer outlet connect a drip irrigation system or a garden hose.



Timer inlet:
3/4 in. female hose thread with screen washer

Timer outlet:
3/4 in. male hose thread

A SETTING – TIME & DAY

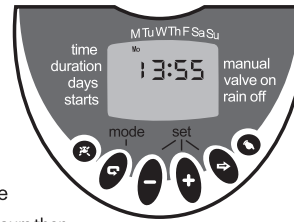

Set the current time

Push to select hours then again to set minutes.


Adjust using AM/PM is set by increasing or decreasing the hour.

Set the current day

Push until the square “Mo” or any day flashes under the day of week.

Set the day of the week using

B SETTING – WATERING DURATION

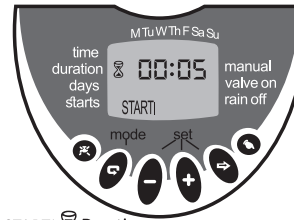


Push and select START Duration.

Adjust watering time by

For example:

→ 5 second
 → 5 minutes
 → 65 minutes
hour


C SETTING – START TIMES

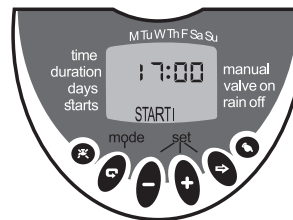

Push and select Starts(start time).

Adjust hours using or push to adjust minutes.

D SETTING – WATERING DAY(S)

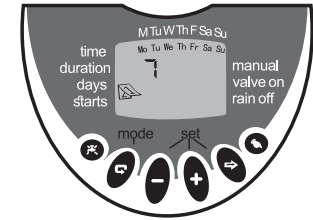

Push and select Days.

Push until the square “Mo” flashes under Monday


Push to deactivate Monday or to keep it active and advance to Tuesday. Do this for each day you would like to water.

Push and select start II Duration. You can set up 4 start time

E MANUAL OPERATION

To instantly water push

Push again to stop watering

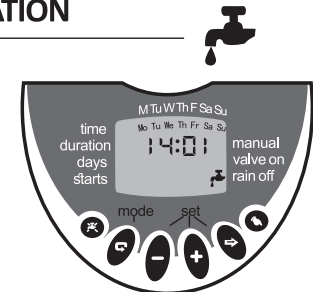


F DELAY WATERING

Used to shut-down timer in winter or when it is raining. Set schedules will be retained.

Push until the symbol appears on the display.

Push and the symbol will disappear and the previously programmed watering schedules will resume.

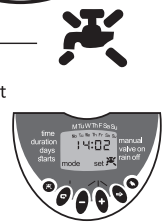

EU Simplified Declaration of Conformity

ONLINESHOP SRL declares that Sprinkler timer PNI WT06 complies with the Directive EMC 2014/30/EU. The full text of the EU declaration of conformity is available at the following Internet address:
<https://www.mypni.eu/products/10089/download/certifications>

Warranty certificate


The commercial guarantee does not affect the rights of the consumer provided by the applicable legislation in force, namely Emergency Ordinance 140/28.12.2021 regarding certain aspects related to contracts for the sale of goods, OG 21/1992 regarding consumer protection with subsequent amendments and additions and Law 296/2004 regarding the consumption code with subsequent changes and additions.



Manual de utilizare



Taste si functii

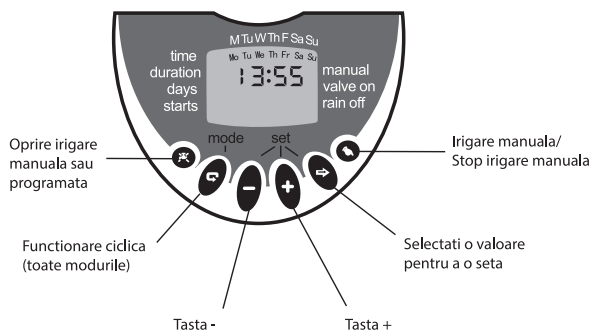

Presiune maxima suportata: 80PSI


Instalare baterii

Baterie alcalina de 9V

Desfaceti capacul de pe compartimentul pentru baterie, instalati bateria si puneti capacul la loc.

Inchideti bine capacul pentru a pastra rezistenta la apa a programatorului.

NOTA: la un minut dupa instalarea bateriei, va fi afisata pe ecran pictograma de baterie incarcata.

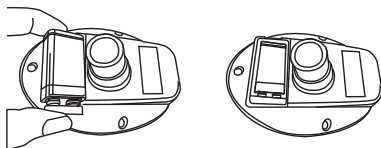

Intretinere


Curatati periodic programatorul si conectorii acestuia.

Daca nu folositi programatorul o perioada mai lunga de timp, scoateti bateria din programator.


Daca se anunta conditii de inghet, deconectati programatorul de la instalatia de irigare si depozitati-l la interior.

Instalare

Conectati robinetul de apa la conectorul de intrare al programatorului.
In iesirea programatorului conectati sistemul de irigatii sau un furtun de gradina.

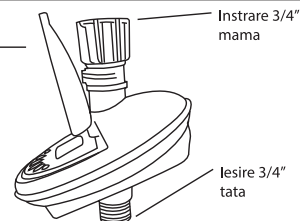


A Setare data si ora

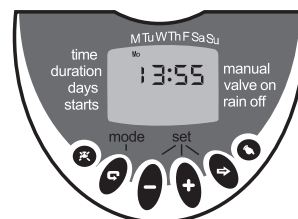

Setare ora
Apasati pentru a selecta ora, mai apasati inca o data pentru a selecta minutele.
Apasati pentru a creste sau descreste valoarea.

Setare data
Apasati pana cand ziua saptamanii ("Mo"; "Tu" etc.) clipeste pe ecran.
Apasati pentru a selecta ziua saptamanii.

B Durata irigare

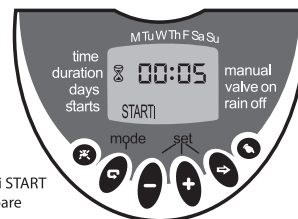


Apasati si selectati START DURATION. Pe ecran apare pictograma .

Apasati pentru a selecta durata:


→ 5 second
 → 5 minutes
 → 65 minutes
hour

C Ora pornire irigare

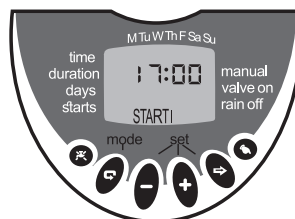

Apasati si selectati START. Pictograma apare pe ecran.
Reglati ora de pornire irigare apasand si pentru a regla minutele

D Selectare zile de irigare

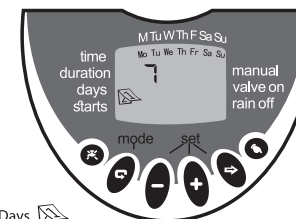

Apasati si selectati Days .


Apasati pana cand "Mo" (monday, luni) clipeste pe ecran

Apasati pentru a dezactiva ziua de luni sau pentru a o lasa activa si a trece la ziua de marti (Tuesday). Procedati astfel pentru toate zilele saptamanii.

Apasati si selectati Start Duration. Puteti seta 4 perioade de pornire pentru fiecare zi.


E Irigare manuala

Apasati pentru a porni irigarea manuala.
Apasati din nou pentru a opri irigarea manuala

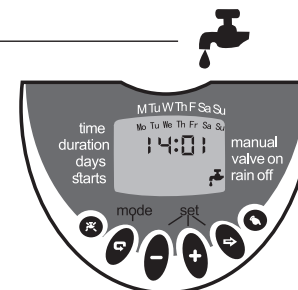

F Amanare irigare

Aceasta functie este utila cand afara ploua si doriti sa dezactivati temporar programul de irigare.
Apasati pana cand pictograma apare pe ecran.
Apasati din nou pentru a dezactiva aceasta functie. Programul setat anterior se va reactiva automat.

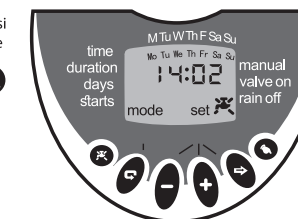

Declaratie de conformitate simplificata

ONLINESHOP SRL declara ca Programator irigatii PNI WT06 respecta Directiva EMC 2014/30/UE. Textul integral al declaratiei de conformitate UE este disponibil la urmatoarea adresa de internet:
<https://www.mypni.eu/products/10089/download/certifications>

Certificat de garantie

Garantia comerciala nu afecteaza drepturile consumatorului prevazute prin legislatia aplicabila in vigoare, respectiv Ordonanta de Urgenta 140/28.12.2021 privind anumite aspecte referitoare la contractele de vanzare de bunuri, OG 21/1992 privind protectia consumatorilor cu modificarile si completarile ulterioare si Legea 296/2004 privind codul consumului cu modificarile si completarile ulterioare.

