

PNI WT07

Sprinkler timer



Safety warnings

- Do not expose the water timer to temperatures below freezing. Disconnect the device from the irrigation system and store it indoors.
- Check the connections of the water timer regularly. Tighten the taps well.
- Periodically clean the water timer.
- Remove the batteries from the water timer if you do not use it for a long period of time.

Battery installation

Loosen the screws and remove the cover from the battery compartment located on the front side of the water timer. Pull out the box and install inside it 2 AAA 1.5V alkaline batteries.

Testing

Before setting the water timer, test it by turning the HOW LONG button from the OFF position to the ON position. The engine will sound for 30 seconds. If you don't hear the engine, check the batteries.


Installation

Holding the water timer firmly, loosen the locking collar ring (3) on the thread located at the top of the water timer until the inner tap adapter (2) is loose. Screw the tap adapter onto the tap and tighten the locking collar

ring (3). Turn on the tap to allow the water to flow.

Note: in order not to damage the water timer components, do not use pliers or wrenches to tighten the collars or the tap adapter.

Connect the irrigation hose to the bottom of the water timer (6).

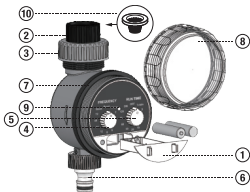

Battery compartment	Hose connector (male)
Tap Connector/ Adapter	Rubber seal

Collar ring	Anti-moisture threaded sleeve
Frequency setting	Battery indicator
Duration setting	Water filter

Irrigation frequency setting

Turn the HOW OFTEN knob until you reach the desired setting (1 - 72 hours).

Set irrigation duration

Turn the HOW LONG knob until you reach the desired setting (1 - 120 minutes).

Note: after you have set the irrigation duration, the irrigation will not start immediately but depending on the HOW OFTEN setting (irrigation frequency).

Manual watering

To irrigate manually at any time, regardless of the settings made previously, turn the HOW LONG button to the ON position. When you want to switch back to automatic mode, turn the knob back to the OFF position, wait 5 seconds and turn the HOW LONG knob to the desired setting.

Note: replace the anti-moisture sleeve after setting the water timer.

Examples of settings

A. You want to water every morning at 6:00 AM and every evening at 6:00 PM for 10 minutes.

You must make the setting either at 6:00 AM or at 6:00 PM. Move the HOW OFTEN button to the 12 hour option and the HOW LONG button to 10 minutes option. After 12 hours, the water timer will start the first irrigation program that will last 10 minutes.

After another 12 hours, the second irrigation program will start, which will also last 10 minutes. From now on, the water timer will irrigate at 6 in the morning and at 6 in the evening for 10 minutes.

B. You want to water once (anytime) for 10 minutes.

Move the HOW OFTEN button to the RESET position and the HOW LONG button to 10 minutes. Irrigation will start immediately and will last 10 minutes.

Notes: the water timer starts counting the time starting with the time you make the programming. For example, if you want to schedule irrigation for 7:00 AM, you must make the setting at 7:00 AM.

To interrupt the irrigation program, move the HOW LONG button to the OFF position. To return to scheduled irrigation, you must reprogram irrigation (frequency, duration).

Troubleshooting

The water does not come out.

- Check if the water tap is open.
- Check if the batteries are charged.
- Check the settings made (frequency, duration). The duration must not be greater than the frequency. For example, you cannot set a frequency of 1 hour and a duration of 60 minutes.

Simplified EU declaration of conformity

ONLINESHOP SRL declares that the PNI WT07 Irrigation Programmer is in compliance with the EMC Directive 2014/30/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.mypni.eu/products/10091/download/certifications>

Warranty certificate

The warranty period for individuals is 24 months from the date of delivery for manufacturing and material defects.

The warranty period for legal entities is 12 months from the date of delivery for manufacturing and material defects.

The commercial guarantee does not affect the rights of the consumer provided by the applicable legislation in force, namely Emergency Ordinance 140/28.12.2021 regarding certain aspects related to contracts for the sale of goods, OG 21/1992 regarding consumer protection with subsequent amendments and additions and Law 296/2004 regarding the consumption code with subsequent changes and additions.

Please download the full version of the warranty certificate:



PNI WT07

Programator pentru irigare



Avertizari de siguranta

- Nu expuneti programatorul de irigatii la temperaturi sub nivelul de inghet. Deconectati dispozitivul de la instalatia de irigare si depozitati-l la interior.
- Verificati in mod regulat conexiunile programatorului de irigatii. Strangeti bine filetele si robinetii.
- Curatati periodic programatorul de irigatii.
- Scoateti bateriile din programatorul de irigatii daca nu il folositi o perioada lunga de timp.

Instalarea bateriilor

Desfaceti suruburile si indepartati capacul de pe compartimentul pentru baterii situat pe partea frontala a programatorului de irigatii. Trageti in afara cutiuta si instalati in interiorul ei 2 baterii alcaline tip AAA 1.5V.

Testare

Inainte de a seta programatorul de irigatii, testati-l rotind butonul HOW LONG de pe pozitia OFF pe pozitia ON. Se va auzi sunetul motorului timp de 30 de secunde. Daca nu auziti motorul, verificati bateriile.


Instalare

Tineti programatorul ferm, slabiti mansonul (3) de pe filetul situat in partea de sus a programatorului pana cand adaptorul interior pentru robinet (2) se elibereaza. Infiletati adaptorul pentru robinet pe robinet si strangeti

bine mansorul (3). Deschideti robinetul pentru a permite fluxul apei.

Nota: pentru a nu deterioara componentele programatorului, nu utilizati cleste sau patent pentru a strange mansorul sau adaptorul pentru robinet.

Conectati furtunul pentru irigatii in partea de jos a programatorului (6).

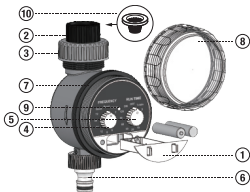

Compartiment baterii	Conector furtun (tata)
Conector/Adaptor robinet	Colier de cauciuc anti-umezeala

Manson filetat	Manson filetat anti-umezeala
Buton setare frecventa irigare	Indicator baterie
Buton setare durata irigare	Filtru de apa

Setare frecventa irigare

Rotiti butonul HOW OFTEN pana ajungeti la setarea dorita (1 - 72 de ore).

Setare durata irigare

Rotiti butonul HOW LONG pana ajungeti la setarea dorita (1 - 120 minute).

Nota: dupa ce ati setat durata de irigare, irigarea nu va porni imediat ci in functie de setarea HOW OFTEN (frecventa irigare).

Irigare manuala

Pentru a iriga manual oricand, indiferent de setarile facute anterior, rotiti butonul HOW LONG pe pozitia ON. Cand doriti sa treceti iar pe modul automat, rotiti butonul inapoi pe pozitia OFF, asteptati 5 secunde si rotiti butonul HOW LONG pe setarea dorita.

Nota: puneti la loc mansonul anti-umezeala dupa ce ati setat programatorul de irigatii.

Exemple de setari

A. Doriti sa irigati in fiecare dimineata la ora 6:00 AM si in fiecare seara la ora 6:00 PM timp de 10 minute.

Trebuie sa faceti programarea fie la ora 6:00 AM fie la ora 6:00 PM. Mutati butonul HOW OFTEN pe optiunea 12 ore si butonul HOW LONG pe 10 minute. Dupa 12 ore, programatorul va incepe primul program de irigare care va dura 10 minute. Dupa alte 12 ore va porni al doilea program de

irigare care va dura tot 10 minute. De acum, programatorul va iriga la ora 6 dimineata si la ora 6 seara timp de 10 minute.

B. Doriti sa udati o data (oricand) timp de 10 minute.

Mutati butonul HOW OFTEN pe optiunea RESET si butonul HOW LONG pe 10 minute. Irigarea va porni imediat si va dura 10 minute.

Note: programatorul incepe sa contorizeze timpul incepand cu ora cand faceti programarea. De exemplu, daca doriti sa programati irigarea pentru ora 7:00 AM, trebuie sa faceti setarea la ora 7:00 AM.

Pentru a intrerupe programul de irigare, mutati butonul HOW LONG pe pozitia OFF. Pentru a reveni la irigarea programata, trebuie sa reprogramati irigarea (frecventa, durata).

Probleme si solutii

Nu iese apa pe furtun.

- Verificati daca robinetul de apa este deschis.
- Verificati daca bateriile sunt incarcate.
- Verificati setarile facute (frecventa, durata). Durata nu trebuie sa fie mai mare decat frecventa. De exemplu, nu puteti seta o frecventa de 1 ora si o durata de 60 de minute.

Declaratie UE de conformitate simplificata

ONLINESHOP SRL declara ca **Programator pentru irigare PNI WT07** este in conformitate cu Directiva EMC 2014/30/EU. Textul integral al declaratiei UE de conformitate este disponibil la urmatoarea adresa de internet:

<https://www.mypni.eu/products/10091/download/certifications>

Certificat de garantie

Perioada de garantie pentru persoane fizice este de 24 luni de la data livrării pentru defectele de fabricație și de material.

Perioada de garantie pentru persoane juridice este de 12 luni de la data livrării pentru defectele de fabricație și de material.

Garantia comercială nu afectează drepturile consumatorului prevăzute prin legislația aplicabilă în vigoare, respectiv Ordonanța de Urgență 140/28.12.2021 privind anumite aspecte referitoare la contractele de vânzare de bunuri, OG 21/1992 privind protecția consumatorilor cu modificările și completările ulterioare și Legea 296/2004 privind codul consumului cu modificările și completările ulterioare.

Va rugăm să descărcați versiunea completă a certificatului de garanție:

