 
 


## User manual

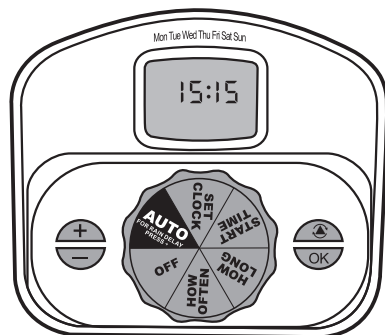

### CONTROL BUTTONS

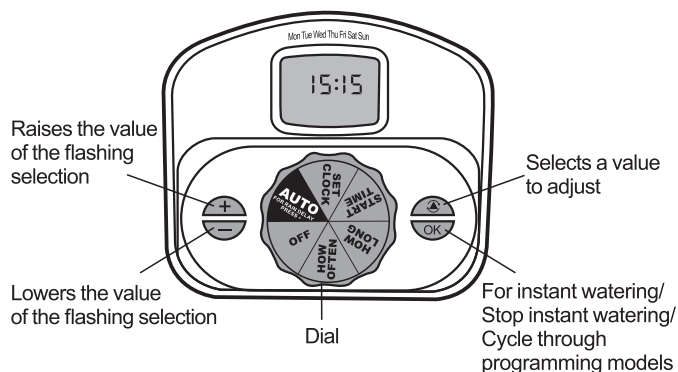

### INSTALLING THE BATTERY




#### 4 × 1.5V ALKALINE BATTERIES ARE RECOMMENDED

Remove the battery cover – keep battery compartment dry – install the 4 × 1.5V Battery by lining up the connections.

Place the battery inside the compartment and reinstall the battery cover.

**NOTE:** When battery is first connected, it takes up to 1 minute for the battery indicator to assess the battery strength.

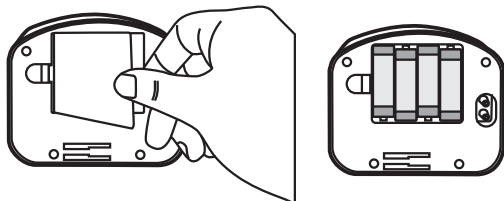

### MAINTENANCE


Remove and clean the screen washer on inlet side of the timer every few months.

Remove battery if timer is not used for an extended time.


In freezing conditions, un-install the timer and bring it indoors to prevent damage.

### HOW TO INSTALL

Use 4/7 tube connect in the two nozzle, then Put the tube which show “IN” to the bucket Another tube connect a drip irrigation system

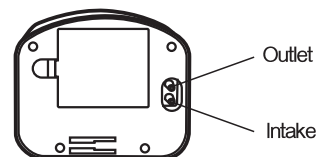

### A SETTING – TIME & DAY

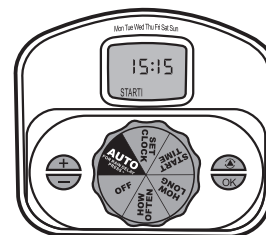


Turn turntable to “SET CLOCK”, Then set time.

Push to select hours, minutes and current day

Adjust using set increasing or decreasing

### B SETTING - START TIME

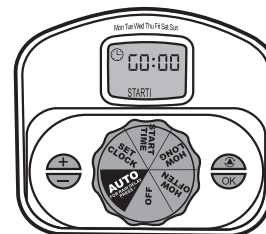


Turn turntable to “START TIME”

Push to select hours then again to set minutes

Push to adjust minutes and hours

Push set up to 4 start

### C SETTING- HOW LONG

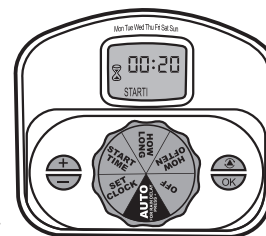


Turn turntable to “HOW LONG”

Adjust using set increasing or decreasing.

Push set up to 4 start.

### D SETTING - HOW OFTEN

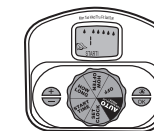

Turn turntable to “HOW OFTEN”

Push until the square flash under Monday

Push to deactivate Monday or to keep it active and advance to Tuesday. Do this for each day you would like to water.

Push set up to 4 start

### E DELAY WATERING



Used to shut - down timer in winter or when it is raining. Set schedules will be retained.

Turn turntable to “OFF” then the symbol appears on the display

Turn turntable to “AUTO”. symbol will disappear and the previously programmed watering

### F MANUAL OPERATION

Turn turntable to “AUTO”

To instantly water push

Push again to stop

Default watering time is 2 minutes



### EU Simplified Declaration of Conformity

ONLINESHOP SRL declares that Sprinkler timer PNI WT09 complies with the Directive EMC 2014/30/EU. The full text of the EU declaration of conformity is available at the following Internet address:


<https://www.mypni.eu/products/10093/download/certifications>

### Warranty certificate


The commercial guarantee does not affect the rights of the consumer provided by the applicable legislation in force, namely Emergency Ordinance 140/28.12.2021 regarding certain aspects related to contracts for the sale of goods, OG 21/1992 regarding consumer protection with subsequent amendments and additions and Law 296/2004 regarding the consumption code with subsequent changes and additions.



## Manual de utilizare

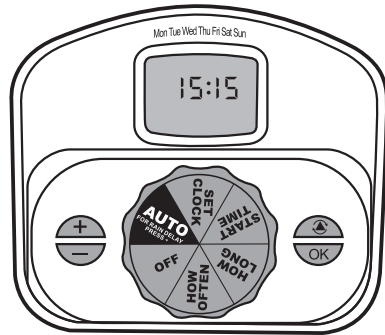

## Taste si functii

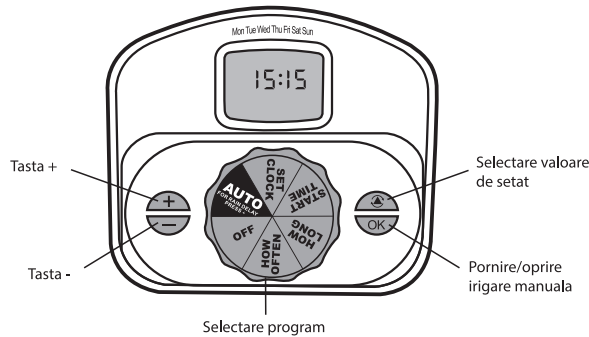

## Instalare baterii




### Sunt necesare 4 baterii alcaline AAA

Desfaceti capacul de pe compartimentul pentru baterie, instalati bateria si puneti capacul la loc.

Inchideti bine capacul pentru a pastra rezistenta la apa a programatorului.

NOTA: la un minut dupa instalarea bateriei, va fi afisata pe ecran pictograma de baterie incarcata.

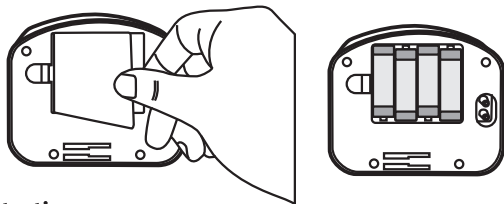


## Intretinere


Curatati periodic programatorul si conectorii acestuia. Daca nu folositi programatorul o perioada mai lunga de timp, scoateti bateria din programator. Daca se anunta conditii de inghet, deconectati programatorul de la instalatia de irigare si depozitati-l la interior.

## Instalare

Conectati robinetul de apa la conectorul de intrare al programatorului. In iesirea programatorului conectati sistemul de irigatii sau un furtun de gradina.

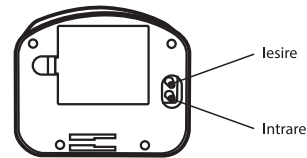


## A Setare data si ora

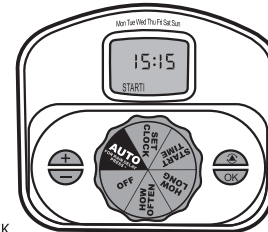


Rotiti butonul pe optiunea SET CLOCK apoi apasati pentru a seta ora, minutele si ziua saptamanii. Apasati pentru a creste sau descreste valoarea.

## B Ora pornire irigare

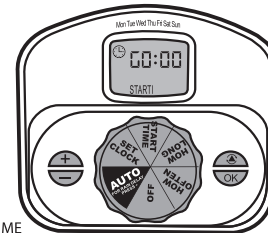

Rotiti butonul pe optiunea START TIME apoi apasati pentru a seta ora si minutele. Apasati pentru a creste sau descreste valoarea. Apasati pentru a confirma.


## C Durata irigare

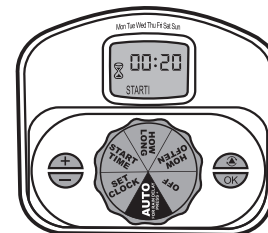

Rotiti butonul pe optiunea HOW LONG Apasati pentru a creste sau descreste valoarea. Apasati pentru a confirma.

## D Frecventa irigare

Rotiti butonul pe optiunea HOW OFTEN apoi apasati pana cand pictograma clipeste in dreptul zilei de luni (Monday) Apasati pentru a dezactiva ziua de luni sau pentru a o pastra si a trece la ziua de marti. Apasati pentru a confirma.

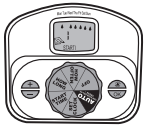

## E Amanare irigare (cand ploua)

Aceasta functie va permite sa amanati irigarea pentru o anumita perioada de timp.

Rotiti butonul pe optiunea OFF, simbolul apare pe ecran. Mutati butonul pe AUTO, simbolul dispare de pe ecran si se va activa programul initial de irigare.



## F Irigare manuala

Rotiti butonul pe optiunea AUTO. Apasati pentru a porni irigarea manuala. Apasati din nou pentru a intrerupe irigarea manuala.



## Declaratie de conformitate simplificata

ONLINESHOP SRL declara ca Programator irigatii PNI WT09 respecta Directiva EMC 2014/30/UE. Textul integral al declaratiei de conformitate UE este disponibil la urmatoarea adresa de internet: <https://www.mypni.eu/products/10093/download/certifications>

## Certificat de garantie

Garantia comerciala nu afecteaza drepturile consumatorului prevazute prin legislatia aplicabila in vigoare, respectiv Ordonanta de Urgenta 140/28.12.2021 privind anumite aspecte referitoare la contractele de vanzare de bunuri, OG 21/1992 privind protectia consumatorilor cu modificarile si completarile ulterioare si Legea 296/2004 privind codul consumului cu modificarile si completarile ulterioare.

