 
 


Sprinkler timer PNI WT10

User manual

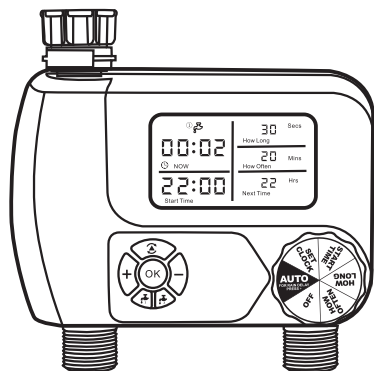

CONTROL BUTTONS

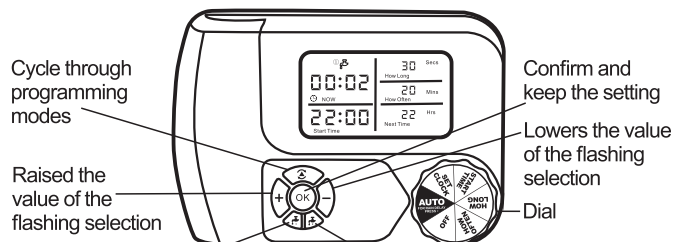

change to first tube/ For instant watering of first tube/stop instant watering of first tube

change to second tube/ For instant watering of second tube/stop instant watering of second tube

Maximum operating pressure: 80PSI For irrigation use only

INSTALLING THE BATTERY

 


2 x AA ALKALINE BATTERIES ARE RECOMMENDED

Remove the battery cover – keep battery compartment dry – install the 2xAA Battery by lining up the connections.

Place the battery inside the compartment and reinstall the battery cover.

NOTE: When battery is first connected, it takes up to 1 minute for the battery indicator to assess the battery strength.

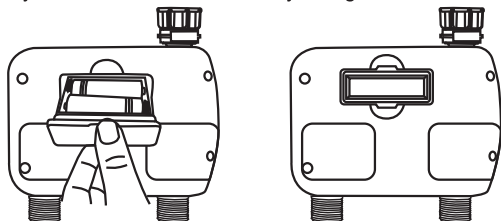

MAINTENANCE



 
Remove and clean the screen washer: on inlet side of the timer every few months.

Remove battery if timer is not used for an extended time.

In freezing conditions, un-install the timer and bring it indoors to prevent damage.

HOW TO INSTALL

Attach the timer inlet to the outdoor faucet/spigot turning clockwise – hand tighten only. From the timer outlet connect a drip irrigation system or a garden hose.

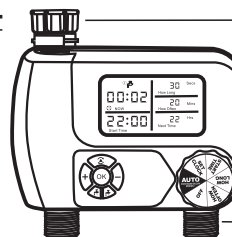

Timer inlet:
3/4 in. female hose thread with screen washer

Timer outlet:
3/4 in. male hose thread

A SETTING - DAY&TIME



Push left until ①

show in screen then we can start to set first tube program

Set the current time

Turn turntable to "SET CLOCK" to

set hours then push to set minutes

Adjust using to increasing or decreasing

After set, Press to confirm and save the setting



B SETTING-START TIME



Set the first time watering

 
Turn turntable to "START TIME"

set hours then push to

set minutes Adjust

using to increasing or decreasing

After set, Press to confirm and save the setting

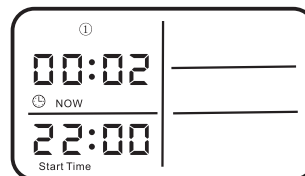

C SETTING - HOW LONG



Set watering time

 
Turn turntable to "HOW LONG" set the watering time.

Adjust using to increasing or decreasing.


(watering time is OF 10-55seconds/per 5seconds,

1-59min/per 1minute,1-99h/per 1hour)

After set, Press to confirm and save the setting

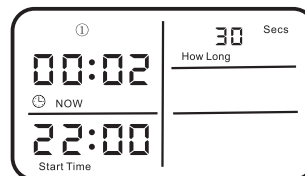

D SETTING - HOW OFTEN

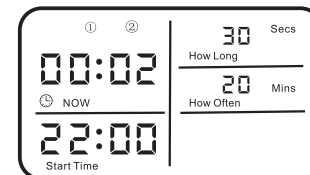 

Set the watering frequency

Turn turntable to "HOW OFTEN" set the watering frequency.

Adjust using to increasing or decreasing.

(Watering frequency: 1-59minutes/per 1minute,1-23hours/per 1hour,1-7days/per 1day)

After set, Press to confirm and save the setting.

After we finish the first tube setting. Then push right until ② show in screen. We can start to set second tube program

E MANUEL OPERATION



To instantly first tube water.

Push left

3seconds until

show in screen.

Then how long screen will flash. You can adjust water time by .

After setting. Press to confirm. then when time arrive, it will stop by itself.

The same operate of second tube.

when you want to stop directly, Press

3seconds, It can stop this time.

These operate will not influence the automatic setting.

F DELAY WATERING



Move the button to OFF to stop irrigation.

Move the button to AUTO to resume irrigation according to the previously set schedule.

Simplified declaration of conformity

ONLINESHOP SRL declares that the PNI WT10 Water timer complies with the EMC Directive 2014/30/EU. The full text of the EU declaration of conformity is available at the following internet address:

 
<https://www.mypni.eu/products/10096/download/certifications>

Warranty certificate


The commercial guarantee does not affect the rights of the consumer provided by the applicable legislation in force, namely Emergency Ordinance 140/28.12.2021 regarding certain aspects related to contracts for the sale of goods, OG 21/1992 regarding consumer protection with subsequent amendments and additions and Law 296/2004 regarding the consumption code with subsequent changes and additions.



Manual de utilizare

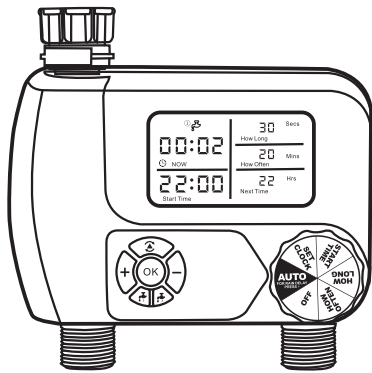

Taste si functii

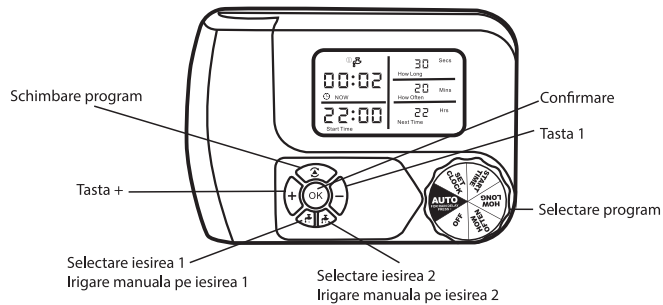 

Instalare baterii

 


Sunt necesare 2 baterii alcaline AA

Desfaceti capacul de pe compartimentul pentru baterie, instalati bateria si puneti capacul la loc.

Inchideti bine capacul pentru a pastra rezistenta la apa a programatorului.


NOTA: la un minut dupa instalarea bateriei, va fi afisata pe ecran pictograma de baterie incarcata.

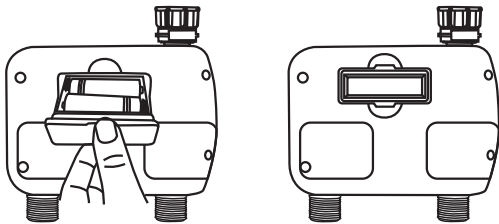

Curatati periodic programatorul si conectorii acestuia.
Daca nu folositi programatorul o perioada mai lunga de timp, scoateti bateria din programator.
Daca se anunta conditii de inghet, deconectati programatorul de la instalatia de irigare si depozitati-l in interior.

Instalare

 Conectati robinetul de apa la conectorul de intrare al programatorului. In iesirea programatorului conectati sistemul de irigatii sau un furtun de gradina.

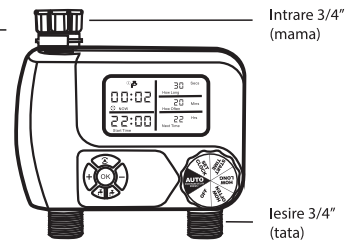

A Setare data si ora



 
Apasati butonul pana cand ① apare pe ecran. Rotiti butonul pe optiunea SET CLOCK. Setati ora si apasati butonul pentru a seta minutele. Apasati tastele pentru a ajunge la valoarea dorita. Apasati pentru a confirma.

B Ora pornire irigare




Mutati butonul pe pozitia START TIME, setati ora apoi apasati pentru a seta minutele. Apasati tastele pentru a ajunge la valoarea dorita. Apasati pentru a confirma.

C Durata irigare

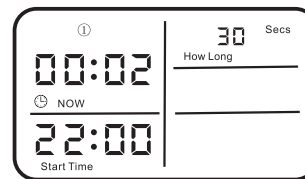

Mutati butonul pe pozitia HOW LONG. Apasati tastele pentru a ajunge la valoarea dorita. Optiuni: OFF, 10-55 sec/5 sec, 1-59 min/1 min, 1-99 ore/1 ora. Apasati pentru a confirma.

 
D Frecventa irigare

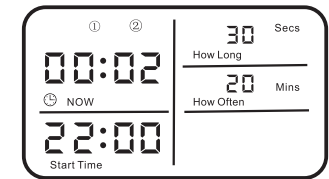

Mutati butonul pe pozitia HOW OFTEN. Apasati tastele pentru a ajunge la valoarea dorita. Optiuni: 1-59 min/1 min, 1-23 ore/1 ora, 1-7 zile/zi. Apasati pentru a confirma.

Dupa ce ati facut setarile pentru iesirea 1, apasati butonul pentru a face setarile pe iesirea 2. Pictograma ② va aparea pe ecran.

 E Irigare manuala

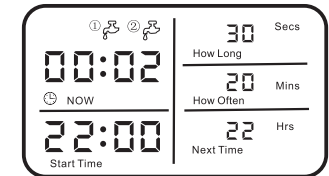

Apasati butonul timp de 3 secunde pentru a activa iesirea 1. Pe ecran apare pictograma ① . Apasati tastele pentru a ajunge la valoarea dorita. Apasati OK pentru a confirma. Cand timpul setat expirat, irigarea se va opri automat.

Procedati in acelasi mod si pentru iesirea 2. Apasati timp de 3 secunde pentru a opri irigarea manuala oricand.

F Amanare irigare



Mutati butonul pe OFF pentru a intrerupe irigarea. Mutati butonul pe AUTO pentru a relua irigarea conform programului setat anterior.

Declaratie de conformitate simplificata

ONLINESHOP SRL declara ca Programator irigatii PNI WT10 respecta Directiva EMC 2014/30/UE. Textul integral al declaratiei de conformitate UE este disponibil la urmatoarea adresa de internet:

<https://www.mypni.eu/products/10096/download/certifications>

Certificat de garantie

Garantia comerciala nu afecteaza drepturile consumatorului prevazute prin legislatia aplicabila in vigoare, respectiv Ordonanta de Urgenta 140/28.12.2021 privind anumite aspecte referitoare la contractele de vanzare de bunuri, OG 21/1992 privind protectia consumatorilor cu modificarile si completarile ulterioare si Legea 296/2004 privind codul consumului cu modificarile si completarile ulterioare.

