 



# 210x145mm

## Sprinkler timer PNI WT12

### User manual

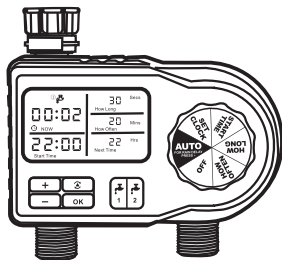
 
### CONTROL BUTTONS

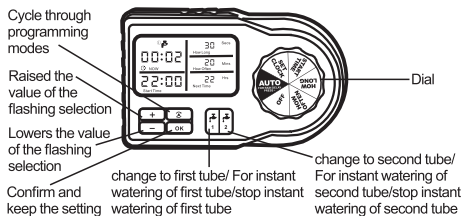

Maximum operating pressure: 80PSI For irrigation use only


### INSTALLING THE BATTERY

2 x AA ALKALINE BATTERIES ARE RECOMMENDED

Remove the battery cover – keep battery compartment dry – install the 2xAA Battery by lining up the connections.

Place the battery inside the compartment and reinstall the battery cover.

**NOTE:** When battery is first connected, it takes up to 1 minute for the battery indicator to assess the battery strength.

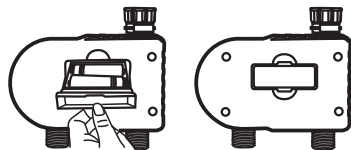

### MAINTENANCE


Remove and clean the screen washer on inlet side of the timer every few months.

Remove battery if timer is not used for an extended time.

In freezing conditions, un-install the timer and bring it indoors to prevent damage.

### HOW TO INSTALL

Attach the timer inlet to the outdoor faucet/spigot turning clockwise – hand tighten only. From the timer outlet connect a drip irrigation system or a garden hose.

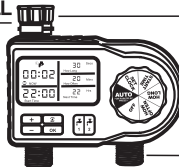

Timer inlet:  
3/4 in. female  
hose thread  
with screen  
washer

Timer outlet:  
3/4 in. male  
hose thread

### A SETTING - DAY&TIME

Set the current time

Turn turntable to "SET CLOCK" to set hours then push to set minutes

Adjust using to increasing or decreasing

After set, Press to confirm and save the setting



### B SETTING-START TIME

Push until show in screen

Set the first time watering

Turn turntable to "START TIME"

set hours then push

to set minutes Adjust

using to increasing or decreasing

After set, Press to confirm and save the setting



### C SETTING - HOW LONG

Set watering time

Turn turntable to "HOW LONG" set the watering time.

Adjust using to increasing or decreasing.

(Watering time is OF, 10-55 seconds/per 5seconds.1-59minutes/per 1minute.1-99hour/per 1hour)

After set, Press to confirm and save the setting



### D SETTING - HOW OFTEN



Set the watering frequency

Turn turntable to "HOW OFTEN" set the watering frequency.

Adjust using to increasing or decreasing.

(Watering frequency: 1-59minutes/per 1minute,1-23hours/per 1hour,1-7days/per 1day)

After set, Press to confirm and save the setting.

After we finish the first tube setting. Then push right until show in screen. We can start to set second tube program

### E NEXT TIME

Next time show is automatic.

It can not be set.

It is according the interval of Now time and Start Time.



### F MANUAL OPERATION

To instantly first tube water.

Push

3seconds until

show in screen. Then how long

screen will flash.

You can adjust water time by After setting. Press

to confirm, then when time arrive, it will stop by itself.

The same operate of second tube.

If you want to stop it directly, Press or

3seconds, It can stop this time.

These operate will not influence the automatic setting.



### Simplified declaration of conformity

ONLINESHOP SRL declares that the PNI WT12 Water timer complies with the EMC Directive 2014/30/EU. The full text of the EU declaration of conformity is available at the following internet address:  
<https://www.mypni.eu/products/10098/download/certifications>

### Warranty certificate

The commercial guarantee does not affect the rights of the consumer provided by the applicable legislation in force, namely Emergency Ordinance 140/28.12.2021 regarding certain aspects related to contracts for the sale of goods, OG 21/1992 regarding consumer protection with subsequent amendments and additions and Law 296/2004 regarding the consumption code with subsequent changes and additions.







# 210x145mm

## Programator pentru irigare PNI WT12

### Manual de utilizare

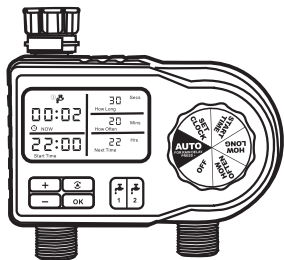

### Taste si functii

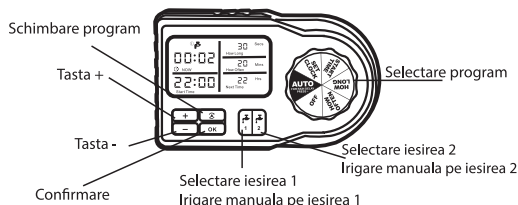

### Instalare baterii




#### Sunt necesare 2 baterii alcaline AA

Desfaceti capacul de pe compartimentul pentru baterie, instalati bateria si puneti capacul la loc.

Inchideti bine capacul pentru a pastra rezistenta la apa a programatorului.

NOTA: la un minut dupa instalarea bateriei, va fi afisata pe ecran pictograma de baterie  data.

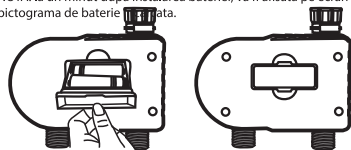


### Intretinere



Curatati periodic programatorul si conectorii acestuia.  
Daca nu folositi programatorul o perioada mai lunga de timp, scoateti bateria din programator.  
Daca se anunta conditii de inghet, deconectati programatorul de la instalatia de irigare si depozitati-l la interior.




 
### Instalare

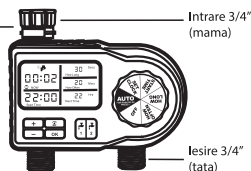Conectati robinetul de apa la conectorul de intrare al programatorului.  
In iesirea programatorului conectati sistemul de irigatii sau un furtun de gradina.



### A Setare data si ora





 



Rotiti butonul pe optiunea SET CLOCK apoi apasati  pentru a seta ora si minutele.  
Apasati   pentru a creste sau descreste valoarea. Apasati  pentru a confirma.



### B Ora pornire irigare


 
 


Apasati butonul  pana cand  apare pe ecran.  
Rotiti butonul pe optiunea START TIME apoi apasati  pentru a seta ora si minutele.  
Apasati   pentru a creste sau descreste valoarea. Apasati  pentru a confirma.




### C Durata irigare





 Mutati butonul pe pozitia HOW LONG  
Apasati tastele   pentru a ajunge la valoarea dorita. Optiuni: OFF, 10-55 sec/5 sec, 1-59 min/1 min, 1-99 ore/1 ora  
Apasati  pentru a confirma.

### D Frecventa irigare



Mutati butonul pe pozitia HOW OFTEN  
Apasati tastele pentru a ajunge la valoarea dorita. Optiuni: 1-59 min/1 min, 1-23 ore/1 ora, 1-7 zile/zi  
Apasati  pentru a confirma.






Dupa ce ati facut setarile pentru iesirea 1, apasati butonul  pentru a face setarile pe iesirea 2.  
Pictograma  va aparea pe ecran.

### E Urmatoarea irigare

Aceasta functie permite afisarea pe ecran a timpului pana la urmatoarea irigare (conform setarilor facute)



### F Irigare manuala

Apasati butonul  pentru a activa iesirea 1.  
Pe ecran apare pictograma .  
Apasati tastele   pentru a ajunge la valoarea dorita. Apasati OK pentru a confirma. Cand timpul setat a expirat, irigarea se va opri automat.  
Procedati in acelasi mod si pentru iesirea 2.  
Apasati  timp de 3 secunde pentru a opri irigarea manuala oricand.



### Declaratie de conformitate simplificata

ONLINESHOP SRL declara ca Programator irigatii PNI WT12 respecta Directiva EMC 2014/30/UE. Textul integral al declaratiei de conformitate UE este disponibil la urmatoarea adresa de internet: <https://www.mypni.eu/products/10098/download/certifications>

### Certificat de garantie

Garantia comerciala nu afecteaza drepturile consumatorului prevazute prin legislatia aplicabila in vigoare, respectiv Ordonanta de Urgenta 140/28.12.2021 privind anumite aspecte referitoare la contractele de vanzare de bunuri, OG 21/1992 privind protectia consumatorilor cu modificarile si completarile ulterioare si Legea 296/2004 privind codul consumului cu modificarile si completarile ulterioare.

