

MODIFICARE FRECVENTA CRT MICRON

- 1) Tineti apasate tastele [P4] si [FUNC] in timp ce porniti statia
- 2) Statia intra in modul "TEST MODE" si pe ecran apare CH XXX.
- 3) Rotiti selectorul de canale pana cand pe ecran apare
CH-043 si MODE 01
- 4) Tineti apasata tasta PTT, pictograma 01 va deveni albastra, rotiti selectorul de canale pana cand pe ecran apare 02, apoi eliberati tasta PTT.
- 5) Inchideti si reporniti statia.
- 6) Statia CRT MICRON opereaza acum in gama de frecvente
136-174 MHz si 400-490 MHz.

EXPORT EXPAND FREQUENCIES CRT MICRON

- 1) Push and hold [P4] and [FUNC] keys while turn on the radio
- 2) The radio enters in "TEST MODE "and display CH XXX.
- 3) Turn the channel rotator to displaying CH-043 and MODE 01
- 4) Push and hold PTT key , 01 will be display in blue color , turn the channel rotator to displaying 02 , then release PTT key .
- 5) Turn off and on again the radio.
- 6) The CRT MICRON can work now between 136 to 174 MHz and
400 to 490 MHz.