

## Pairing the PNI SafeHome PT Remote One touch remote control with the PNI SafeHome PT101 smart switch

To pair these two devices, hold down the button on the PNI SafeHome PT101 smart switch for about 3 seconds until it emits a beep. As soon as the beep is heard, press the PNI PT Remote once. Now the two devices are paired.

To disconnect them, hold down the button on the PNI SafeHome PT101 smart switch for approximately 6 seconds until it emits two beeps. After hearing the 2 beeps, the PNI PT Remote will unpair.

If after the 2 sequences we keep pressing the PNI SafeHome PT101 smart switch, it will reset.

In the event of a power failure or power interruption to the PNI SafeHome PT101 smart switch, when the power returns, the PNI PT Remote remains paired.

Also, if we change the battery in the PNI PT Remote, it remains paired with the smart switch.

## Imperechere Telecomanda cu touch simplu PNI SafeHome PT Remote One cu Intrerupatorul inteligent PNI SafeHome PT101

Pentru imperechere, se tine apasat aproximativ 3 secunde butonul pe intrerupatorul inteligent PNI SafeHome PT101 pana emite un beep. Imediat cum este auzit beep-ul, se apasa pe telecomanda PNI PT Remote o singura data. Acum, cele doua dispozitive sunt imperecheate.

Pentru desperechere, se tine apasat aproximativ 6 secunde butonul pe intrerupatorul inteligent PNI SafeHome PT101 pana emite doua beep-uri. Dupa auzirea celor 2 beep-uri, telecomanda PNI PT Remote se va desperechea.

Daca dupa cele 2 secvente continuam sa tinem apasat pe intrerupatorul inteligent PNI SafeHome PT101, acesta se va reseta.

In cazul unei pene de curent sau intreruperea alimentarii la intrerupatorul inteligent PNI SafeHome PT101, la revenirea curentului, telecomanda PNI PT Remote ramane imperecheata.

De asemenea, in cazul in care schimbam bateria la telecomanda PNI PT Remote, aceasta ramane imperecheata cu intrerupatorul inteligent.