

## **Imperechere si modificare melodii sonerie de interior**

- Resetare soneriei de interior: Se tine apasat butonul cu pictograma “difuzor” pana se aude un sunet scurt “Dii” .
- Alegere melodie dorita: Dupa resetare apasati sagetile de pe unitate pana ajungeti la melodia dorita
- Imperechere sonerie cu interfon: In timp ce soneria ruleaz melodia dorita apasati butonul de apelare rotund de pe interfon.

## **Pairing and changing songs for indoor chime**

- Reset the indoor chime: Press and hold the "speaker" button until you hear a short "Dii" sound.
- Choose your favorite ringtone: After reset, press the arrow keys on the unit until you reach your favorite ringtone.
- Pair chime with video doorbell: While the ringtone is playing, press the round call button on the intercom.