


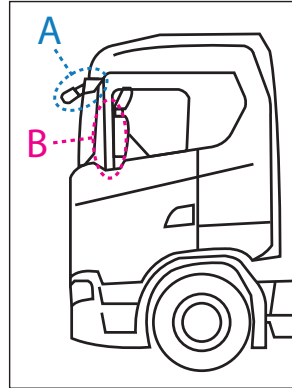






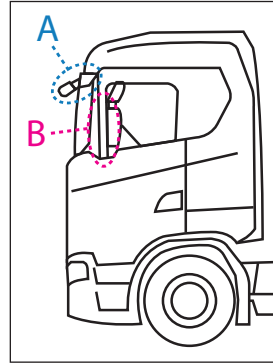
PNI antenna brackets installation










Model	Design	Mounting	Suggested for
PNI SPA-3		For sun visor upright (A)	Volvo FH Serie 1
PNI SPA-12		For vertical upright driver door (B)	IVECO S-WAY, HI-WAY, S-WAY-CNG/LNG
PNI SPA-13		For sun visor upright (A)	SCANIA NEW-R, SUPER-R, STREAMLINE, SERIE 4
PNI SPA-22		For vertical upright driver door (B)	IVECO STRALIS, EUROCARGO, CUBE
PNI SPA-33		For vertical upright driver door (B)	SCANIA SERIE R/S/G, NEW GENERATION
PNI SPA-53		For sun visor upright (A)	DAF SERIE XG, XG PLUS, SERIE XF M.Y.2022
PNI SPA-111		For sun visor upright (A)	IVECO EUROCARGO

Instalare

suporti antene PNI



Model	Design	Locatie instalare	Recomandat pentru
PNI SPA-3		Montaj pe parasolar (A)	Volvo FH Serie 1
PNI SPA-12		Montaj pe montant vertical usa sofer (B)	IVECO S-WAY, HI-WAY, S-WAY-CNG/LNG
PNI SPA-13		Montaj pe parasolar (A)	SCANIA NEW-R, SUPER-R, STREAMLINE, SERIE 4
PNI SPA-22		Montaj pe montant vertical usa sofer (B)	IVECO STRALIS, EUROCARGO, CUBE
PNI SPA-33		Montaj pe montant vertical usa sofer (B)	SCANIA SERIE R/S/G, NEW GENERATION
PNI SPA-53		Montaj pe parasolar (A)	DAF SERIE XG, XG PLUS, SERIE XF M.Y.2022
PNI SPA-111		Montaj pe parasolar (A)	IVECO EUROCARGO