


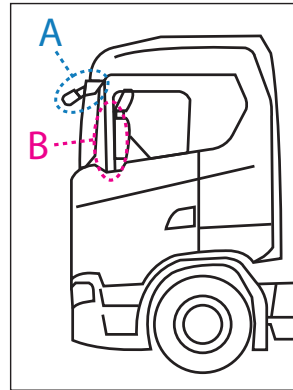








# PNI antenna brackets installation










| Model             | Design  | Mounting                             | Suggested for                                      |
|-------------------|---|--------------------------------------|--|
| <b>PNI SPA-3</b>  |    | For sun visor upright (A)            | Volvo FH Serie 1                                   |
| <b>PNI SPA-12</b> |    | For vertical upright driver door (B) | IVECO S-WAY, HI-WAY, S-WAY-CNG/LNG                 |
| <b>PNI SPA-13</b> |    | For sun visor upright (A)            | SCANIA NEW-R, SUPER-R, STREAMLINE, SERIE 4         |
| <b>PNI SPA-19</b> |   | For vertical upright driver door (B) | DAF XF SERIE 95/105/106, XF EURO6 (M.Y. 2013-2020) |
| <b>PNI SPA-22</b> |  | For vertical upright driver door (B) | IVECO STRALIS, EURO CARGO, CUBE                    |
| <b>PNI SPA-33</b> |  | For vertical upright driver door (B) | SCANIA SERIE R/S/G, NEW GENERATION                 |

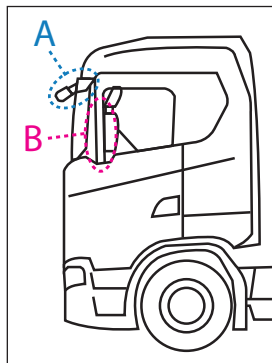


|                           |   |  |   |
|---------------------------|---|--|---|
| <p><b>PNI SPA-42</b></p>  |  | <p>Driver's side, above the first anchorage of sun visor (A)</p> | <p>MERCEDES BENZ ACTROS 2016</p>                |
| <p><b>PNI SPA-53</b></p>  |  | <p>For sun visor upright (A)</p>                                 | <p>DAF SERIE XG, XG PLUS, SERIE XF M.Y.2022</p> |
| <p><b>PNI SPA-111</b></p> |  | <p>For sun visor upright (A)</p>                                 | <p>IVECO EURO CARGO</p>                         |

# Instalare

## suporti antene PNI



| Model             | Design  | Locatie instalare                        | Recomandat pentru                                  |
|-------------------|---|--|--|
| <b>PNI SPA-3</b>  |    | Montaj pe parasolar (A)                  | Volvo FH Serie 1                                   |
| <b>PNI SPA-12</b> |    | Montaj pe montant vertical usa sofer (B) | IVECO S-WAY, HI-WAY, S-WAY-CNG/LNG                 |
| <b>PNI SPA-13</b> |    | Montaj pe parasolar (A)                  | SCANIA NEW-R, SUPER-R, STREAMLINE, SERIE 4         |
| <b>PNI SPA-19</b> |   | Montaj pe montant vertical usa sofer (B) | DAF XF SERIE 95/105/106, XF EURO6 (M.Y. 2013-2020) |
| <b>PNI SPA-22</b> |  | Montaj pe montant vertical usa sofer (B) | IVECO STRALIS, EURO CARGO, CUBE                    |
| <b>PNI SPA-33</b> |  | Montaj pe montant vertical usa sofer (B) | SCANIA SERIE R/S/G, NEW GENERATION                 |

|                           |   |                                |   |
|---------------------------|---|--------------------------------|---|
| <p><b>PNI SPA-42</b></p>  |  | <p>Montaj pe parasolar (A)</p> | <p>MERCEDES<br/>BENZ<br/>ACTROS 2016</p>                |
| <p><b>PNI SPA-53</b></p>  |  | <p>Montaj pe parasolar (A)</p> | <p>DAF SERIE XG,<br/>XG PLUS, SERIE<br/>XF M.Y.2022</p> |
| <p><b>PNI SPA-111</b></p> |  | <p>Montaj pe parasolar (A)</p> | <p>IVECO<br/>EUROCARGO</p>                              |